

How to Use

1. Install Batteries

Insert three AAA batteries into the battery compartment and turn the power switch ON.

2. Touch & Sound Interaction Mode

- Gently touch the head or body, or make a sound near the toy.
- The toy will respond by moving its head left and right and nodding up and down.
- After returning to the center position, the toy will stop moving and will only respond again when it detects another touch or sound.

3. Music Mode

- Press the button on the body once to play a song.
- While playing, the toy will move its head side to side and nod up and down.
- Press the button again to switch to the next song.

4. Voice Mimic Mode

- Press and hold the button on the body until you hear a “beep-beep” sound.
- The toy will enter voice mimic mode and repeat what you say.
- While mimicking, the toy will also move its head left and right and nod up and down.



WARNING:
CHOKING HAZARD—Small parts not for children under 3 years or any individuals who have a tendency to place inedible objects in their mouths.



LASLUSATOYS



LASLUSATOYS



LASLUSATOYS

www.laslusatoys.com

info@laslusatoy.com



Kullanım Talimatları

1.Pilleri Takın

Pil yuvasına üç adet AAA pil yerleştirin ve güç anahtarını AÇIK (ON) konumuna getirin.

2.Dokunma ve Sesle Etkileşim Modu

·Oyuncağın başına veya gövdesine hafifçe dokunun ya da yakınında bir ses çıkarın.

·Oyuncak, başını sağa sola sallayarak ve yukarı aşağı hareket ettirerek (başını sallayarak) tepki verir.

·Orta konuma döndükten sonra oyuncak durur ve yalnızca yeniden dokunma veya ses algıladığında tekrar tepki verir.

3.Müzik Modu

·Gövde üzerindeki düğmeye bir kez basın; bir şarkı çalmaya başlar.

·Şarkı çalarken oyuncak başını sağa sola sallayıp yukarı aşağı hareket ettirir.

·Düğmeye tekrar basarak şarkıyı değiştirebilirsiniz.

4.Ses Taklit Modu

·Gövde üzerindeki düğmeye uzun basın, "bip bip" sesi duyduğunuzda bırakın.


·Oyuncak ses taklit moduna geçer ve söylediklerinizi tekrar eder.


Taklit ederken oyuncak aynı zamanda başını sağa sola sallayıp yukarı aşağı hareket ettirir.




WARNING:
CHOKING HAZARD—small parts not for children under 3 years or any individuals who have a tendency to place inedible objects in their mouths.



 LASLUSATOYS

 LASLUSATOYS

 LASLUSATOYS

www.laslusatoys.com

info@laslusatoys.com

